 


# **Toastee 3000™ Digital Toaster**

## **User Manual**

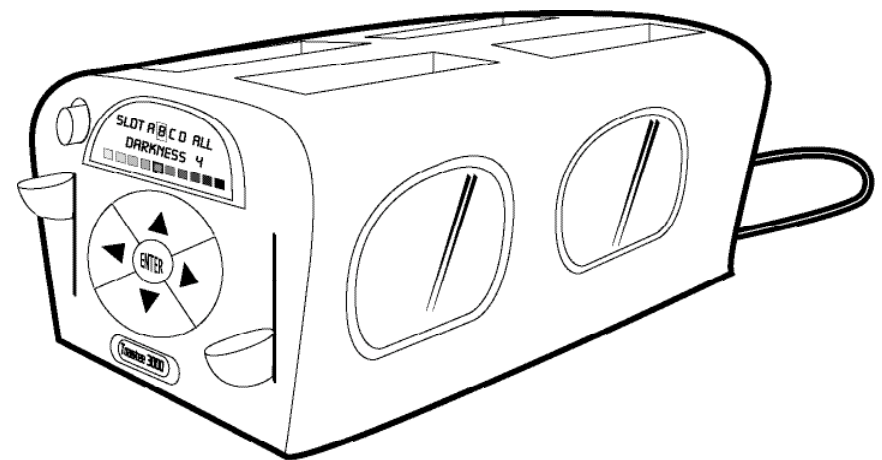

**Toastee 3000™  
Digital Toaster**

**Table of Contents**

About the Product.....2

Product Description .....2-3

Operating Instructions.....4-5

## About the Product

 
The **Toastee 3000™ Digital Toaster** makes up to four slices of evenly cooked toast in just seconds. The **Toastee 3000™** has individual heat zones, so each slice can be cooked at a different temperature for customized toast.

Now everyone in your family can enjoy their toast exactly the way they like it!

## Product Description


- ① Stainless steel design: The **Toastee 3000™** is made from premium stainless steel that never needs to be cleaned. It is also cool to the touch, even immediately after use.
- ② Toast slots: Extra wide slots fit even the widest bread and bagels.
- ③ Programming dial and digital operating display: Allows you to individually program the temperature and darkness levels for each slice of toast.

- ④ Automatic handles: As soon as you program your toast settings, your bread or bagel automatically plunges into the toaster.
- ⑤ Shut-off button: Simple push-button that allows you to end your toasting cycles early if you wish.
- ⑥ Glass viewing panel: Heat-resistant see-through glass panel that allows you to watch your bread or bagel as it toasts.

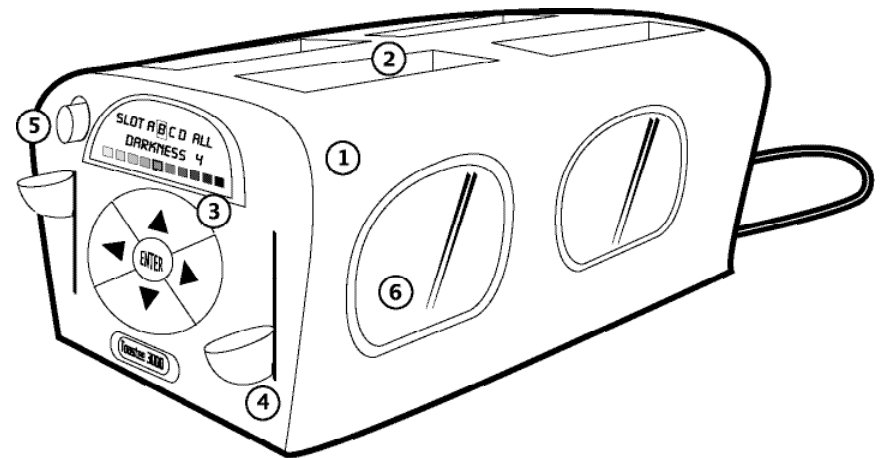

## Operating Instructions

 1. Plug the toaster cord into a standard electrical outlet.
2. Place the first slice in Slot A. Place the next slice in Slot B, then Slot C, etc.
3. Use the programming wheel to program the individual toast settings.:

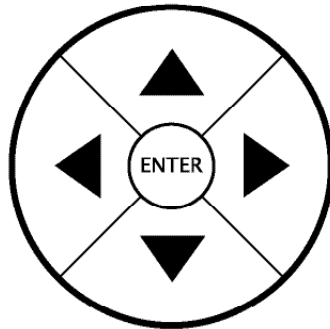

- (a) Slot A should appear automatically on the digital display. If it doesn't, scroll through the Slot List with the Up and Down buttons on the programming wheel. Push the Enter button in the middle of the programming wheel to select Slot A.
- (b) The Toast Setting display should now appear. Use the Left or Right buttons to choose the toast darkness you prefer. Push the Enter button in the middle of the programming wheel to select this toast darkness for Slot A.
- (c) Repeat Steps (a) and (b) for the additional slots.

Note: If you want all of your slices to toast the same, select ALL from the Slot List, then set your darkness in the Toast Settings display.

*WARNING: Keep this toaster away from water or wet surfaces. Electrical shock or death may occur.*